



User manual

Specifications are subject to change without notice

© 2022 Koninklijke Philips N.V. All rights reserved.

3000 089 4783-1 (12/2017/2022)

English

Congratulations on your purchase, and welcome to the Philips support community. We are here to help you get the most out of your Philips SHB30. Please visit our website at www.philips.com/welcome for more information.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference. It contains important information.

WARNING: Do not use this appliance near water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Always unplug the appliance after use.

If the main cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and older with adequate supervision and/or technical guidance.

Children should not play with the appliance. Cleaning and user maintenance shall not be made by children or persons without adequate knowledge.

For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the appliance. The RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.

Do not insert metal objects into the air grilles to avoid electric shock.

Do not block the air grilles.

Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

Do not use the appliance for any other purpose than described in this manual.

Only use for drying and styling spray hair. Do not use the appliance by holding the product.

When the appliance is connected to the power, never leave it unattended.

Never use any accessories or parts from other manufacturers or parts that are not specifically recommended.

If you use such accessories or parts, your warranty becomes invalid.

If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes.

Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

If there is a fire, do not use the appliance. Call the fire department.

Wait until the appliance has cooled down before you store it.

Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are not avoid contact with the skin.

Avoid the main cord from coming into contact with the hot parts of the appliance.

Do not use the appliance with anything (e.g. a towel or clothing) when it is hot.

Do not operate the appliance with wet hands.

Always return the appliance to a service center authorized by Philips for repair. Repair by anyone other than Philips personnel is not an authorized Philips service.

People could get injured in an extremely hazardous situation for the user.

Keep the appliance clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.

The barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

If the appliance is used on color-treated hair, the barrel may be stained.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

This symbol means that this product shall not be disposed of with normal household waste (2012/19/UE).

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

2 Overview

○ Hanging loop
○ Airflow switch
○ Release button
○ Handle
○ On/Off switch
○ Bristle retractable knob
○ Thermobrush
○ Padbrush
○ Nozzle
○ Pouch

3 Style your hair

Note

Always let the appliance and attachments cool down before you connect or disconnect the attachments.

Do not use the appliance on completely wet hair. Dry your hair with a towel first. The appliance is most effective on towel-dried hair.

Select a suitable attachment for the hairstyle you want:

Styling result
Create natural straight hair
Create more volume at roots
Create inward/Outward flairs
Create loose curls

Attachment
Paddle brush (○)
Thermobrush (○)
Thermobrush (○)
Retractable bristle brush (○)

Day hair
Night hair

Slide the airflow switch (○) in Fig. 1

7 Gentle and cool airflow for fixing your hair style.

8 Strong and warm airflow for fast drying and styling.

9 Care temperature setting for gentle drying and styling, preventing your hair from overheating.

If the appliance is powered on, ions are automatically and continuously dispersed to provide additional shine and reducing frizz.

After styling, apply hair spray or mousse to fix your hairstyle.

After use:

1 Place it on a heat-resistant surface until it cools down.

2 Remove hairs and dust from the appliance and attachments.

3 Avoid misuse of the pouch. Keep the pouch away from babies and children to prevent the danger of suffocation.

4 Guarantee and service

If you need more information or if you have any problems, contact the Philips Customer Care in your country.

If the appliance is covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.


If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

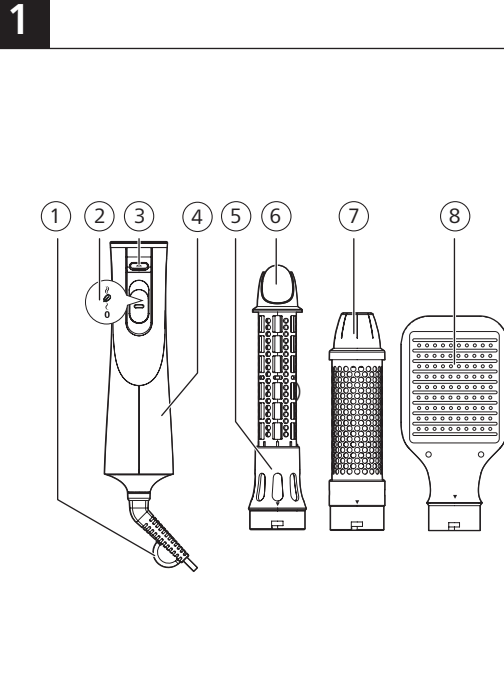

Specifications are subject to change without notice

© 2022 Koninklijke Philips N.V. All rights reserved.

3000 089 4783-1 (12/2017/2022)

English

Congratulations on your purchase, and welcome to the Philips support community. We are here to help you get the most out of your Philips SHB30. Please visit our website at www.philips.com/welcome for more information.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference. It contains important information.

WARNING: Do not use this appliance near water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Always unplug the appliance after use.

If the main cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and older with adequate supervision and/or technical guidance.

Children should not play with the appliance. Cleaning and user maintenance shall not be made by children or persons without adequate knowledge.

For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the appliance. The RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.

Do not insert metal objects into the air grilles to avoid electric shock.

Do not block the air grilles.

Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

Do not use the appliance for any other purpose than described in this manual.

Only use for drying and styling spray hair. Do not use the appliance by holding the product.

When the appliance is connected to the power, never leave it unattended.

Never use any accessories or parts from other manufacturers or parts that are not specifically recommended.

If you use such accessories or parts, your warranty becomes invalid.

If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes.

Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

If there is a fire, do not use the appliance. Call the fire department.

Wait until the appliance has cooled down before you store it.

Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are not avoid contact with the skin.

Avoid the main cord from coming into contact with the hot parts of the appliance.

Do not use the appliance with anything (e.g. a towel or clothing) when it is hot.

Do not operate the appliance with wet hands.

Always return the appliance to a service center authorized by Philips for repair. Repair by anyone other than Philips personnel is not an authorized Philips service.

People could get injured in an extremely hazardous situation for the user.

Keep the appliance clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.

The barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

If the appliance is used on color-treated hair, the barrel may be stained.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

This symbol means that this product shall not be disposed of with normal household waste (2012/19/UE).

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

2 Overview

○ Hanging loop
○ Airflow switch
○ Release button
○ Handle
○ On/Off switch
○ Bristle retractable knob
○ Thermobrush
○ Padbrush
○ Nozzle
○ Pouch

3 Style your hair

Note

Always let the appliance and attachments cool down before you connect or disconnect the attachments.

Do not use the appliance on completely wet hair. Dry your hair with a towel first. The appliance is most effective on towel-dried hair.

Select a suitable attachment for the hairstyle you want:

Styling result
Create natural straight hair
Create more volume at roots
Create inward/Outward flairs
Create loose curls

Attachment
Paddle brush (○)
Thermobrush (○)
Thermobrush (○)
Retractable bristle brush (○)

Day hair
Night hair

Slide the airflow switch (○) in Fig. 1

7 Gentle and cool airflow for fixing your hair style.

8 Strong and warm airflow for fast drying and styling.

9 Care temperature setting for gentle drying and styling, preventing your hair from overheating.

If the appliance is powered on, ions are automatically and continuously dispersed to provide additional shine and reducing frizz.

After styling, apply hair spray or mousse to fix your hairstyle.

After use:

1 Place it on a heat-resistant surface until it cools down.

2 Remove hairs and dust from the appliance and attachments.

3 Avoid misuse of the pouch. Keep the pouch away from babies and children to prevent the danger of suffocation.

4 Guarantee and service

If you need more information or if you have any problems, contact the Philips Customer Care in your country.

If the appliance is covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.


If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

If the appliance is not covered by a warranty, please contact the Philips Customer Care in your country.

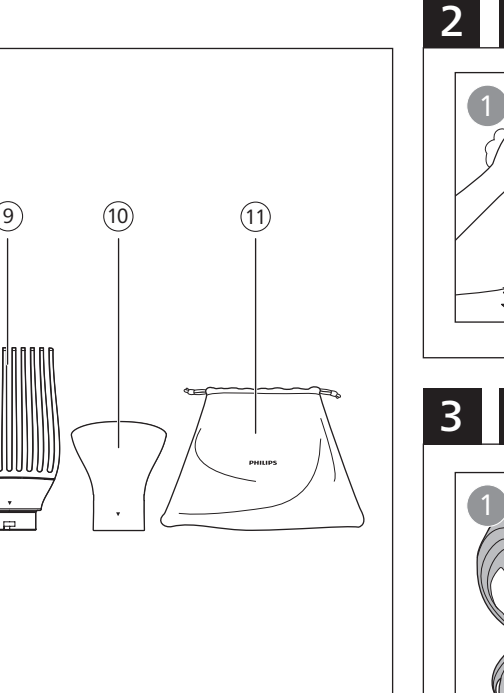

Specifications are subject to change without notice

© 2022 Koninklijke Philips N.V. All rights reserved.

3000 089 4783-1 (12/2017/2022)

English

Congratulations on your purchase, and welcome to the Philips support community. We are here to help you get the most out of your Philips SHB30. Please visit our website at www.philips.com/welcome for more information.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference. It contains important information.

WARNING: Do not use this appliance near water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Always unplug the appliance after use.

If the main cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and older with adequate supervision and/or technical guidance.

Children should not play with the appliance. Cleaning and user maintenance shall not be made by children or persons without adequate knowledge.

For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the appliance. The RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.

Do not insert metal objects into the air grilles to avoid electric shock.

Do not block the air grilles.

Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

<

